

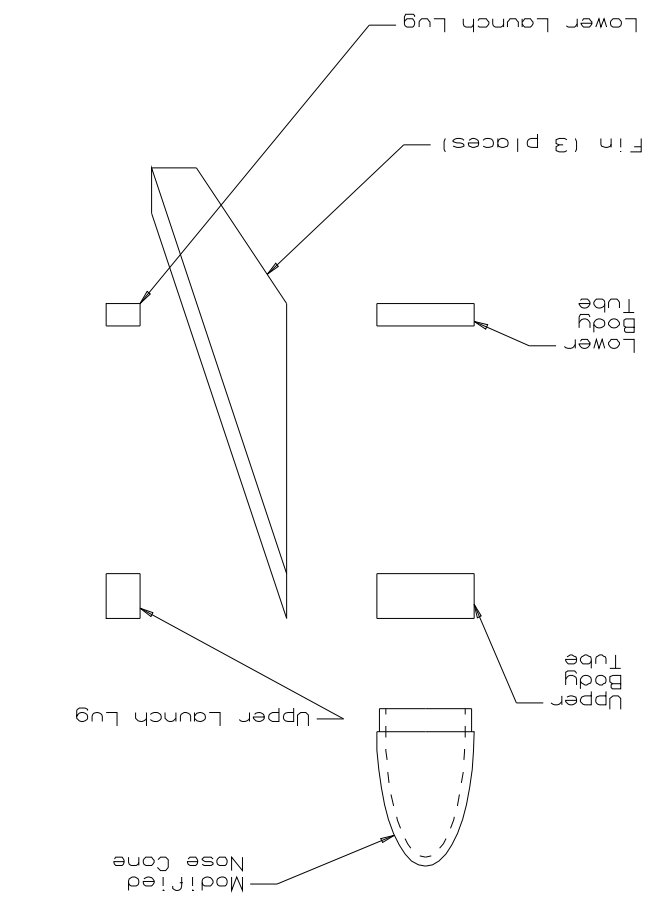



MAKE 3
FIN PATTERN
1/16" Balsa

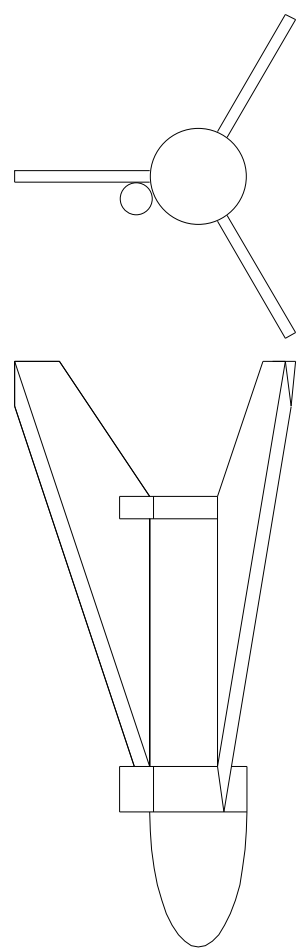

Discard the lower 1/8" of shoulder and hollow out the two halves of the nose cone. Glue the halves back together.

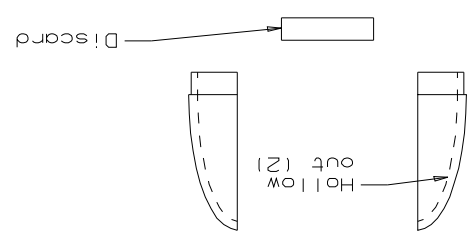

Cut nose cone, as shown, removing the lower 1/8" of shoulder and cutting the remaining cone in half.

